

# DELTACOM

*Intercom System*



**D200S**

**Operating  
Instructions**


# Instructions for the 200S

## Table of Contents

<b>The Master Station</b> .....	2
Clock Set Button.....	2
Alarm Set Button .....	3
Display Button .....	3
Radio Button.....	4
Selective Calling.....	4
The Volume Control.....	4
The Status Lights.....	4
<b>How to Use the Intercom</b> .....	5
The Talk Button .....	5
The Cancel Button .....	5
The Privacy Button .....	6
The Music Button.....	6
The Monitor Button .....	6
The Door Button .....	6
The Unlock Button .....	6
Options.....	7
Sleep Function.....	7
Manufacturer's Warranty.....	8

# The Master Station

Note: It is not necessary to include a Master station in the system. When the system is run without a Master station, it is called a 200S Minicom.

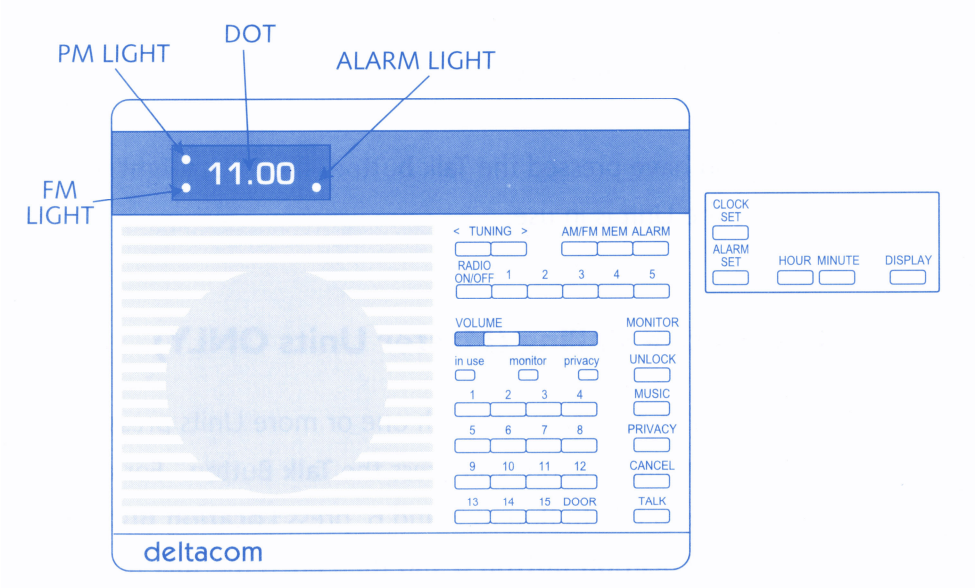

## Master Unit

The Clock Radio Controls on the Master Unit are located on the top right hand side of the Unit. A protective lens covers the Clock adjustment buttons.

### ■ Clock Set Button

To adjust the time, press the **Clock Set** button, this places the unit in “CLOCK SET MODE”. While in this mode

- Press either the **hour** or **minute** button to adjust the time accordingly.
- The **Dot** will be illuminated and not “flash” every second.
- Only the **Hour** or **Minute** buttons will respond in this mode.
- To return to normal operation or to leave “CLOCK SET MODE” press the **Clock Set** button again.

## ■ Clock Set Button (cont.)

The **PM** Light will illuminate to indicate that the clock is showing **PM** and will **not** be lit when it is **AM**.

While the time is displayed the **Dot** will flash every second.

When the **Alarm Time** is displayed the **dot** will **not** flash nor will it be illuminated.

## ■ Alarm Set Button

When alarm time is displayed a vertical dash will be shown in the top left corner of the 4 digit display.

To adjust the alarm time, press the **Alarm Set** button to place the system in "ALARM SET MODE". While in this mode the numbers will flash rapidly, and you can press either the **hour** or **minute** button to adjust the ALARM time. To Exit "ALARM SET MODE" press the **Alarm Set** button again.

To activate the alarm press the **Alarm** button. The alarm light will illuminate to indicate that the Alarm has been turned on. To turn off the Alarm, press the Alarm button again.

The Alarm will turn the Radio on and music will be heard for approximately one hour at the Room Units.

If the alarm is not required at a Room Unit, press and hold the Privacy button for more than two (2) seconds. When the button is released, a short beep will be heard to signify the Alarm function at that Unit has been successfully deactivated.

To re-activate the Alarm Function, press and hold the Unlock button. Once again, a short beep will be heard to signify the successful re-activation of the Alarm Function at that Unit.

## ■ Display Button

The **Display** button will change the display to show the time, alarm time and the radio frequency each time it is pressed. The Display will automatically revert back to the time.

## ■ Radio Button

The Radio controls are located below the **Clock** controls. The **Radio On/Off** button turns the Radio on or off. When the Radio is turned on the **Radio On/Off** light will be illuminated. (**Note: Music** button must be turned **ON** to hear the Radio.)

To tune the Radio press one of the **Tuning** buttons either up or down for one second. The radio will automatically search for a station. If the radio scans past your required station simply tap either **Tuning** button to stop the scan. You can then manually tune the radio by briefly tapping one of the **Tuning** Buttons and it will step through the channel bank each time the **Tuning** Button is pressed.

To switch from the AM Band to the FM Band press the **AM/FM** button.

To store stations in the memory press the **MEM** button and then press the **Channel** button you want to store the Station in. There are 5 preset stations for both AM and FM.

5 minutes after entering a new station into a memory position it will be locked into the memory and will remain even if power is removed from the system

## ■ Selective Calling

If you wish to communicate with one or more Units press their location button(s) before you press the **Talk** Button. For example, if you choose to talk to Rooms 3 and 6, press **Location Button 3**, then press **Location Button 6** and then press the **Talk** Button. This may be done from the Master Unit ONLY.


## ■ The Volume Control

The **Volume** Control will adjust the volume of music, intercom and chime at that Unit.

## ■ The Status Lights

The **In Use** light shows when the system is in use. The **On** light shows when a Unit is included in an Intercom call. The **Privacy** light shows when privacy is selected.

# How to Use the Intercom

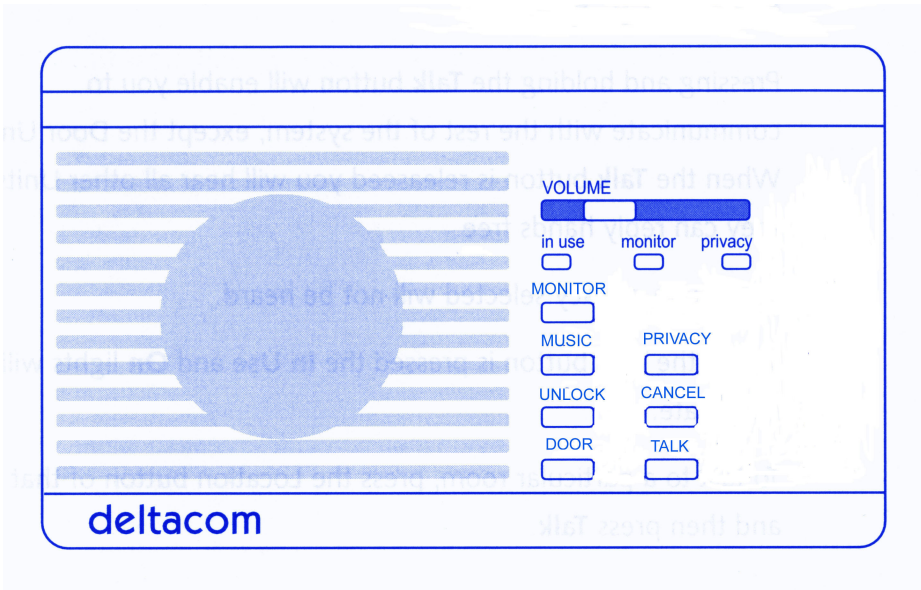

Room Unit

## ■ The Talk Button

Pressing and holding the **Talk** button will enable you to communicate with the rest of the system except the Door Unit. When the **Talk** button is released you will hear all other Units and they can reply hands-free.

Units with **Privacy** selected will not be heard.

When you have pressed the **Talk** button, the **In Use** light will indicate the Unit is in use.

## ■ The Cancel Button

The **Cancel** button will cancel a call you have made. You may only use the **Cancel** function if you initiated the call. If you do not cancel a call, the Unit will automatically cancel thirty (30) seconds after the **Talk** button was released.

## ■ The Privacy Button

The **Privacy** button, when pressed, will prevent others from listening to your Unit. The privacy light will be illuminated if privacy has been selected. If you wish to respond to a call and privacy is selected you can de-select privacy by pressing the **Privacy** Button.

## ■ The Music Button

The **Music** button will allow music to be heard, if the Radio is turned on, at that Unit (with Master or Music Interface).

To select Music press the **Music** button and to de-select Music press the **Music** button again. If a music interface is used the stereo **MUST** be turned on before pressing the **Music** button or you may hear a hissing noise. This means there is no audible music to be heard. Check the stereo.

## ■ The Monitor Button

If you want to monitor a Unit, press the **Monitor** button at the Unit to be monitored. To show that the Unit is being monitored, the **In Use** and **Monitor** lights will illuminate. The Unit will be able to be heard at all other Units in the system, except the Door Unit.

Some of the other Units may choose not to listen to the monitored Unit and may press their **Cancel** button to prevent listening to the noise from the monitored Unit.

To stop monitoring, press the **Monitor** button again. The Monitor light will turn off.

## ■ The Door Button

If you want to talk to the Door Unit you must first press the **Door** button. After pressing the **Door** button then use the **Talk** button as you would for normal conversations.

## ■ The Unlock Button

In the case where an electric latch is fitted to the system, the Unlock button may be used to operate such a device. To operate the electric latch, first press the door button and then the Unlock button. The electric latch will be activated for five (5) seconds.

## ■ Options

Each Unit may be programmed to enable / disable features of the system.

These features include: -

- A Unit will / will not receive the Door Chime
- A Unit will / will not be able to operate the Unlock function
- A Unit will / will not be able to select Privacy

## ■ Sleep Function

Music may be turned on for approximately one hour by pressing and holding the **Music** button for more than two (2) seconds.

When the button is released, a short beep will be heard to signify the Sleep Function has been successfully activated.

**Note:** This feature applies to the Room Units only.

# Manufacturer's Warranty

Hampshire Way Pty Ltd (herein referred to as Deltacom) hereby warrants, subject to

the conditions specified herein, to repair or at their option, replace:

1. Any part of the intercom which proves to be defective by reason of faulty workmanship or materials without charge for labour or parts for a period of ninety (90) days from the date of original retail purchase.
2. Any part of the intercom which proves to be defective by reason of faulty workmanship or materials for a period of twenty four months limiting its charges to labour.

This warranty only applies provided that the intercom system:

- Has been operated in accordance with the operating instructions
- Has not been subject to misuse, abuse, improper installation, negligence or accident
- Has not been repaired, modified or tampered with by anyone other than an authorised agent

This warranty does not cover:

- Travelling costs to the location of the intercom
- Damage to other parts of the installation such as cable, connectors and removal or reinstallation costs
- Ingress or damage including corrosion caused by water, moisture, humidity or other liquid substance to the intercom
- Interference caused by external electrical fields such as dimmers, electrical appliances, radio transmitters, electricity authority cables, mobile phones and the like
- Freight to and from the premises of Deltacom
- Damage caused by lightning strike or application of over voltage
- Radio reception

## Deltacom's Commitment

Deltacom is committed to High Quality Products and Services.  
Should you have concerns, queries, suggestions or difficulties,  
Contact - Technical Support: 03 9894 4099

**Your D200S System has been installed by:**

**Your D200S System has been manufactured by:**



INTERCOMS – DUCTED VACCUMS – SECURITY ALARMS  
Hampshire Way Pty Ltd ITF the Dowel Trust T/AS Deltacom  
24 ALFRED STREET BLACKBURN VIC AUSTRALIA 3130  
[www.intercoms.com.au](http://www.intercoms.com.au)

**Tel: (03) 98944099** ABN: 22 818 910 108 **Fax: (03) 98943331**